

Wiring:

Don't stress over wiring the connector.

Contact the club manager or electrician to see if they know the orientation of the wires.

Or contact a club member with an Autopuller to see how they have wired their connector.

Your club electrician may have used different color wires. That will not affect the connector wiring.

On the **Skeet/Sporting Clays** field you can also try putting a wire on each terminal of the connector.

Then launch a high, low and double.

Right targets? You are finished wiring.

Wrong targets? You need to flip two wires in the connector that you just installed:

Here is a quick chart to let you know which wires.

High launches Low and vice versa: Black and White

High and Doubles but no Low: Green and Black

Low and Doubles but no High: Green and White

On the **Trap** Field.

Put the green wire on one terminal, the black and white together on the other terminal. (Be sure to use the same two terminals that the club uses.)

Common Troubleshooting

Intermittent launch or random launches after arming

Possible microphone problem. Unplug the microphone and launch a target using the manual release button.

If that works, order a new microphone.

You can launch singles, but the doubles stop working. - Replace the battery.

False launches on a windy day

Open the battery compartment on the controller and place both switches in the up position. This reduces the sensitivity of the microphone.


Suddenly you can't launch one of the targets

Check that one of the wires didn't come loose in the connector that you installed.

The Receiver doesn't respond to the controller.

See the manual for synchronizing the controller to the receiver.

READ THIS FIRST

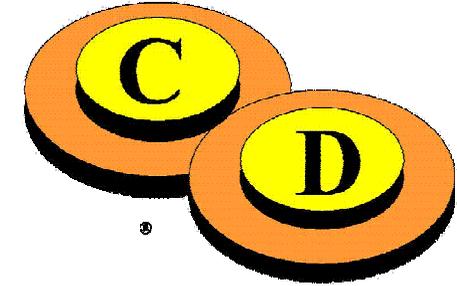

Autopuller Quick Reference Guide

Before you Begin:

Connect the batteries (They are in the compartment, but they are not plugged in.)

Play with the system at home before you go to the club (It doesn't need to be plugged in to the field.)

Helpful Tips

Changing the battery - use the battery cover as an aid to pry the battery snap loose.

Autopuller Controller - the one with the belt clip

*features vary by model

Arming Buttons

Push here to select a target.
Push both buttons for a double

Indicator Lights

Blinking - shows which mode is active - Color light matches the mode in the circle, Alternating means both modes in that circle are active
Solid - shows target selected

Mode selection Buttons

Press circles to turn on or off the mode.
Indicator lights show which mode in standby.

Top Small Button

Press for instant launch instead of using the mic you still need to press a big button to select the target

Mic/Battery Light

Green - voice detected
Red blinking - low battery

Thumbwheel

Power on/off
Adjusts Mic sensitivity



How do I arm the Microphone?

Press a top arming button (labeled underneath on the front label). The light will go from flashing to solid.

How do I get a double?

For doubles press both buttons before you call. It doesn't have to be exactly at the same time.



How do I turn on a mode?

Press the red circle with the letters of the mode that you want. If the light starts blinking over the circle, then it is on. (On higher models you will need to match the color of the light to the color of the ink for the mode: green ink and green light, red ink and red light. Keep pressing the button until you get the color you want. If you want both, the lights will alternate red and green)

How do I turn off a mode?

Press the red circle with the letters of the mode that you want to turn off. If the light stops blinking, then it is off.



How do I make the delay shorter?

Turn off all the modes except the one that you want to adjust. Press and hold the manual button until the red 'Batt' light turns on. Press and **HOLD** the **low** arming button to decrease the delay. Turn the controller off with the thumb wheel to complete this adjustment.

How do I make the delay longer?

Turn off all the modes except the one that you want to adjust. Press and hold the manual button until the red 'Batt' light turns on. Press and **HOLD** the **high** arming button to increase the delay. Turn the controller off with the thumb wheel to complete this adjustment.

(Tip: If you want to use another mode with no delay, just turn off the delay when you turn on the other mode.)



Autopuller Receiver - the one with the antenna

*features vary by model

Power/Data Light

Green slow blink - power on
Green fast blink - low battery
Red - receiving signal from controller

Power Button

Press to turn off or on.
See 3 quick blinks and hear a click - receiver is turned off.

Target Launch Light

Green - low/right/target
Red - high/left
Orange - double



What modes do I have?

The letters in the red circles, will tell you what modes you have.

- VD= Voice Delay
- AD= American Delay
- H/L= High/Low combo
- ID= International Delay
- RA= Rearm
- RP= Following Pair
- FP= Following Pair
- PC= Pull Cord